

John Sands **SEGA**[®]

LOADING INSTRUCTIONS

1. INSERT AND REWIND TAPE.
2. TYPE LOAD "PRG" AND PRESS "CR".
3. PRESS "LOAD" BUTTON ON RECORDER.
4. ON "READY" PROMPT TYPE "RUN" AND PRESS "CR".
5. PROGRAM WILL LOAD AND AUTO RUN.
6. FOLLOW ANY SCREEN PROMPTS TO LOAD AND RUN ANY FOLLOWING PROGRAM PARTS.